

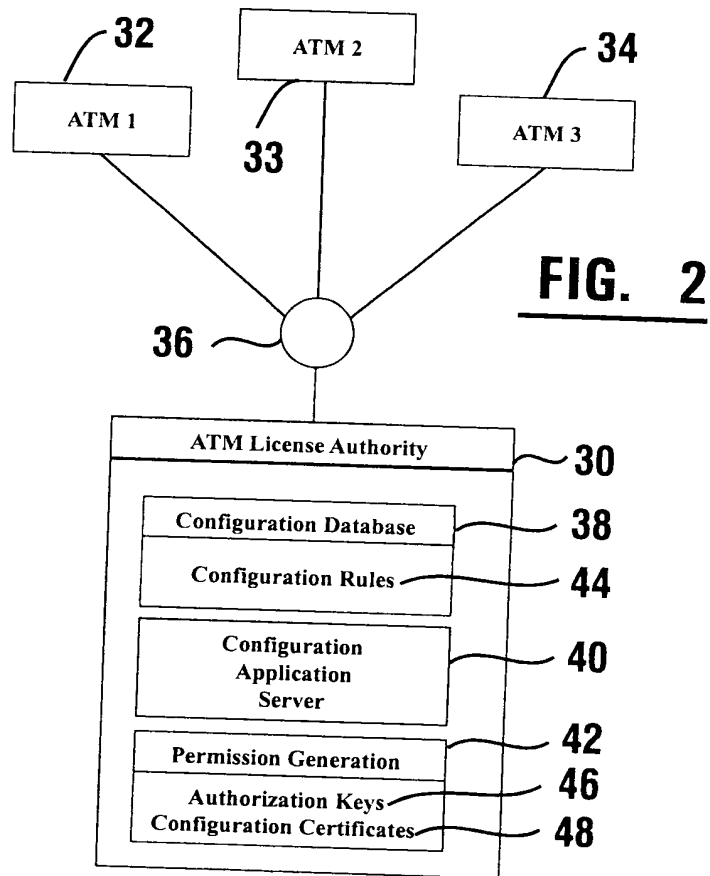


# Replacement Sheet

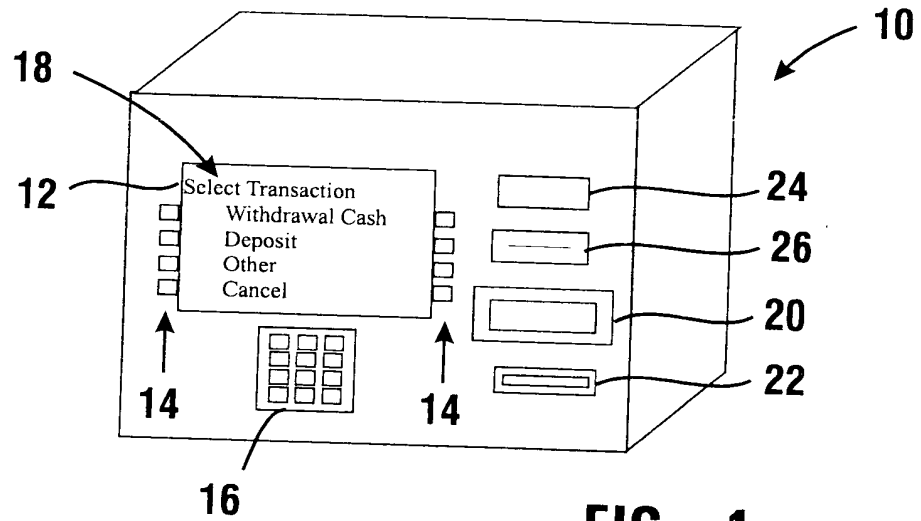

# Replacement Sheet

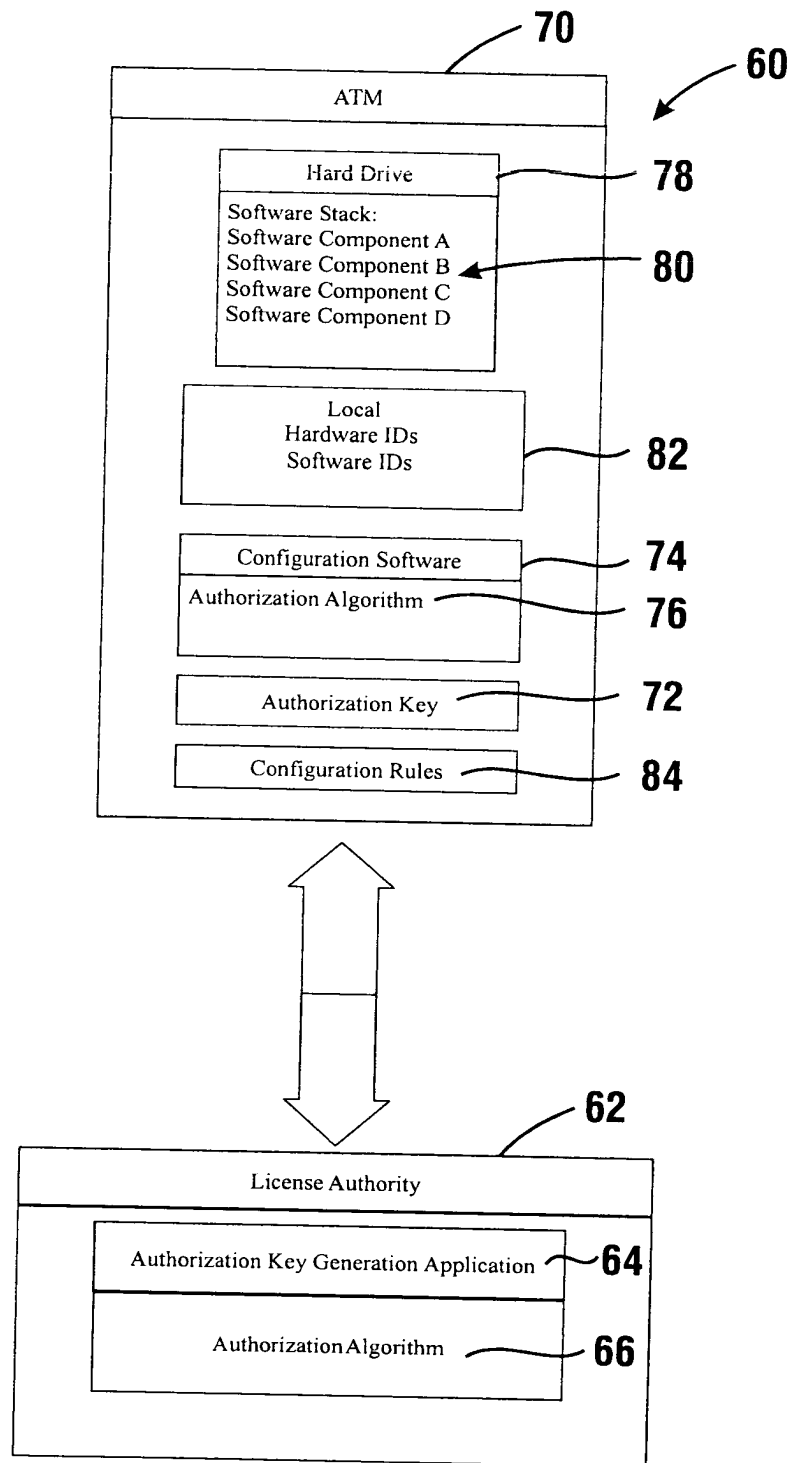

**FIG. 3**

# Replacement Sheet

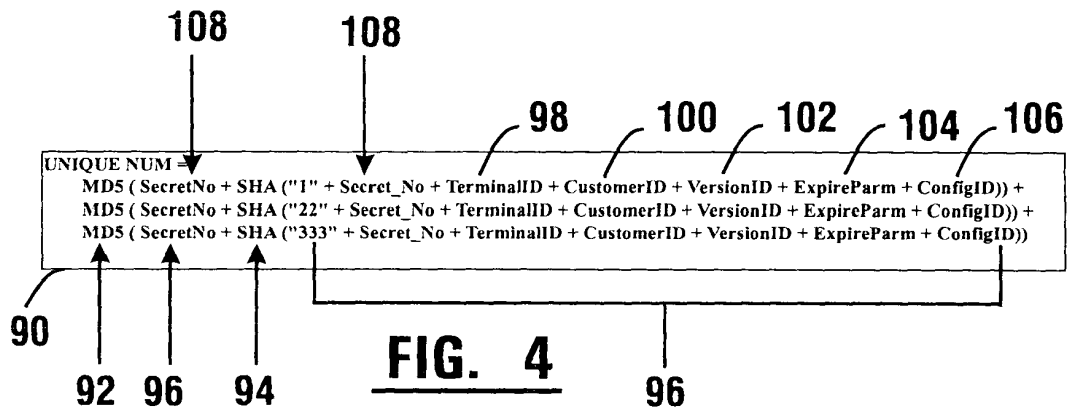



Diagram illustrating an automated banking machine configuration screen (FIG. 5). The screen displays the title "AUTOMATED BANKING MACHINE CONFIGURATION" and a series of input fields for configuration parameters. The input fields are labeled 124, 126, and 122. The input fields are grouped by a bracket labeled 128. The input fields are:

- Enter Authorization Key: 622OG485KNN - 212588
- Enter Terminal ID: AR8264
- Enter Customer ID: 108823-895
- Enter Expiration Date: 01/01/2004
- Enter Configuration ID: 00569

At the bottom of the screen, there are four buttons: BACK, NEXT, CANCEL, and HELP.

FIG. 5

# Replacement Sheet

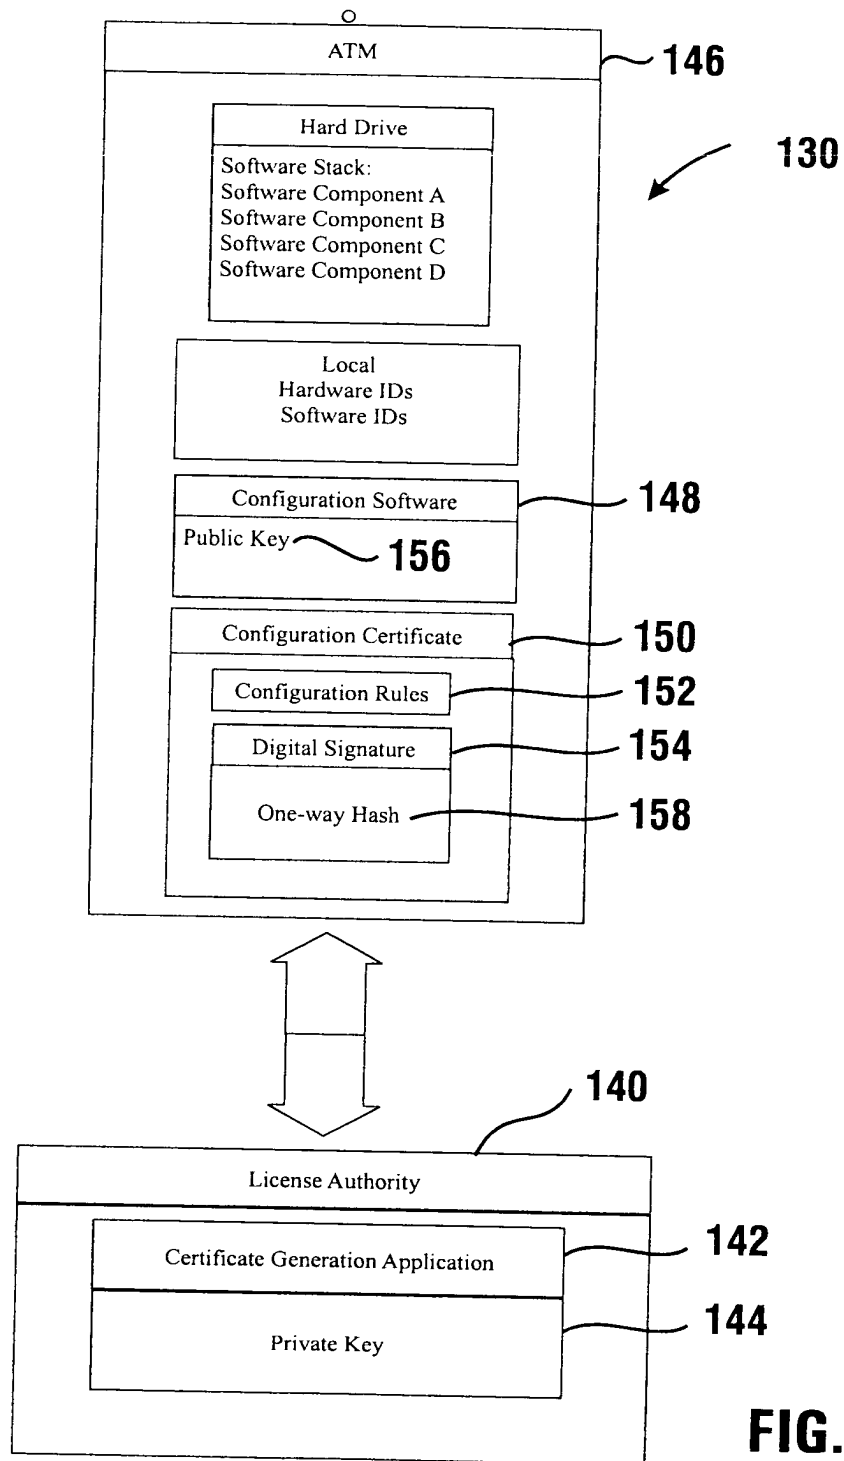

**FIG. 6**

160

170

164

166

168

180

182

184

186

188

190

162

174

ATM Configuration Certificate									
Configuration Rules									
TerminalID	Components	A	B	C	D	E	F	G	H Exp
AR658		X		X					30
AR785		X	X	X				X	30
AR554		X	X	X	X				365

Customer Name	XYZ BANK
Customer Number:	5893-005
Order Number:	15936876-88245-01
Expiration:	01/01/2004

Certificate Version

ATM Software License

Terms of ATM Software License for Multiple ATMs

Digital Signature of License Authority

**FIG. 7**

Replacement Sheet

192

**AUTOMATED BANKING MACHINE CONFIGURATION**

Enter Location of Certificate:

**FIG. 8**

200

**AUTOMATED BANKING MACHINE CONFIGURATION**

Terminal Configurations Authorized on Certificate  
Select a Configuration for this Machine:

TerminalID	Components	A	B	C	D	E	F	G	H
AR658		X			X				
AR785		X	X				X		
AR554		X	X	X					

202

**FIG. 9**